


TRACER TAG NUMBERING

BUNDLE TRACERS & INSULATE TOGETHER AS FAR AS POSSIBLE. SUPPORT EVERY 2 METERS OR RUN BUNDLE IN RACEWAY

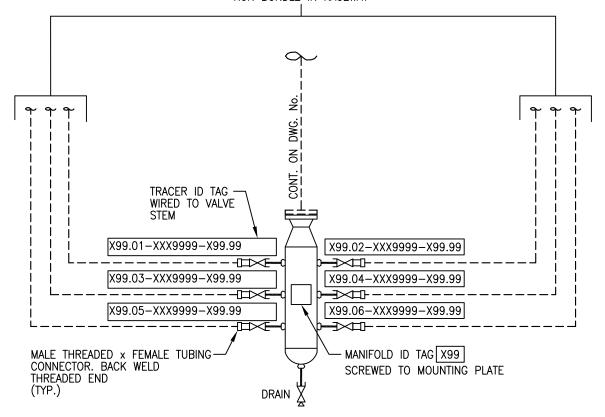

NOTES

- TRACER & MANIFOLD TAGS TO BE UVHDPE WITH 15mm HIGH BLACK LETTERS ENGRAVED ON A 40mm HIGH YELLOW BACKGROUND. DRILL 3mm HOLE IN L.H. END OF THE TRACER TAGS & AT EACH CORNER OF THE MANIFOLD TAGS. ROUND ALL CORNERS.
 TRACERS LEAVING THE MANIFOLD SHOULD BE RUN PARALLEL TO THE MANIFOLD USING 90 DEG BENDS AVOID THE USE OF 45 DEG CHANGES OF DIRECTION.
 FOR A LIST OF TRACERS BY LINE NUMBER SEE TRACING LOG.

CLIENT

DWG. No.

N.T.S.

0	ISSUED FOR CONSTRUCTION								
REV	REVISION					DRN	СНК	ENG	APP
CLIENT		TITLE							
DDEL	DAREN BY	6 TRACER GLYCOL MANIFOLD AND TRACER I.D. TAGS MANIFOLD No. X99							
PREPARED BY		SCALE	DWG. No.	GT-006	PROJ.				REV.