


TRACER TAG NUMBERING

BUNDLE TRACERS & INSULATE TOGETHER AS FAR AS POSSIBLE. SUPPORT EVERY 2 METERS OR RUN BUNDLE IN RACEWAY.

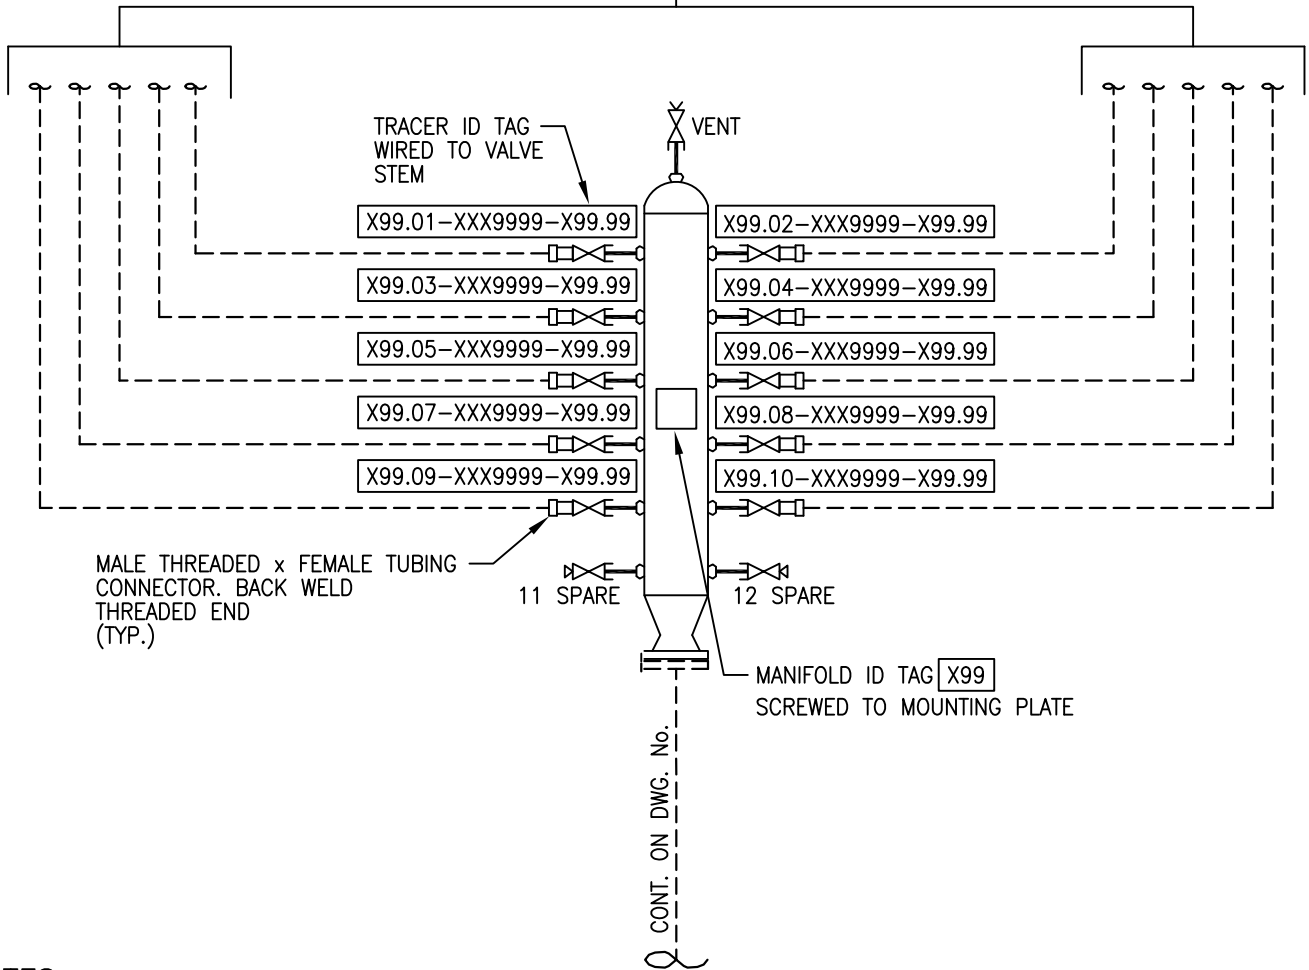

NOTES:

1. TRACER & MANIFOLD TAGS TO BE UVHDPPE WITH 15mm HIGH BLACK LETTERS ENGRAVED ON A 40mm HIGH YELLOW BACKGROUND. DRILL 3mm HOLE IN L.H. END OF THE TRACER TAGS & AT EACH CORNER OF THE MANIFOLD TAGS. ROUND ALL CORNERS.
2. TRACERS LEAVING THE MANIFOLD SHOULD BE RUN PARALLEL TO THE MANIFOLD USING 90 DEG BENDS AVOID THE USE OF 45 DEG CHANGES OF DIRECTION
3. FOR A LIST OF TRACERS BY LINE NUMBER SEE TRACING LOG.

0	ISSUED FOR CONSTRUCTION						
REV	REVISION	DATE	DRN	CHK	ENG	APP	
CLIENT	TITLE						
	10 TRACER GLYCOL MANIFOLD AND TRACER I.D. TAGS INVERTED MANIFOLD No. X99						
PREPARED BY	SCALE	DWG. No.	GT-008	PROJ.	REV.		
	N.T.S.	CLIENT DWG. No.			0		